


# Garmin GPS Setup And Routing

**Page 2:** Nuvi and Zumo Setup

**Page 3:** Handheld Setup


**Page 4:** Nuvi and Zumo Routing

**Page 5:** Handheld Routing

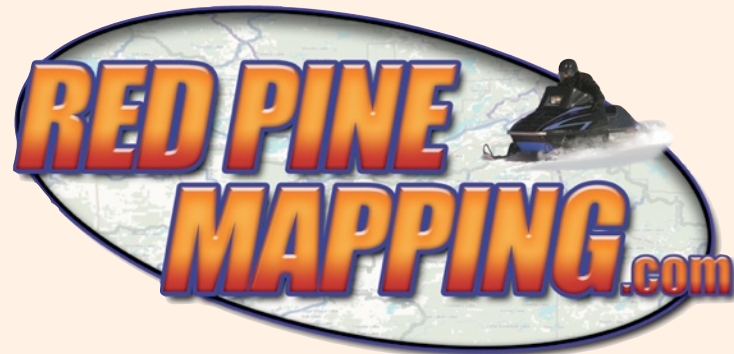


## Setting Up A Garmin Nuvi or Zumo


Follow these instructions to configure your Nuvi or Zumo for use with Red Pine Mapping maps.

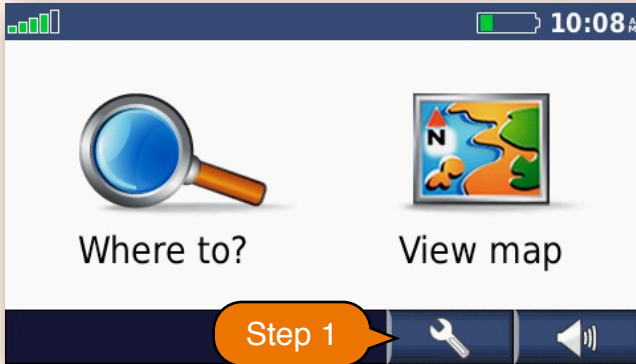

1. Tap the wrench / tools icon.

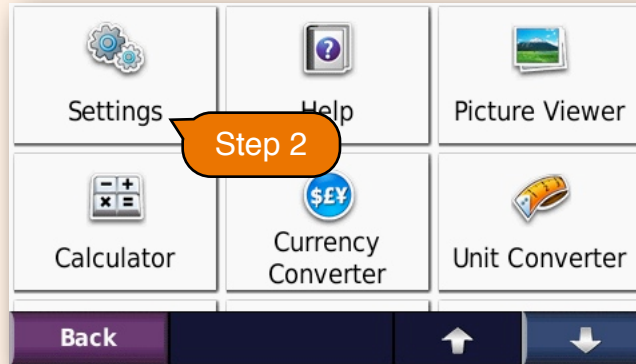

2. Tap Settings.

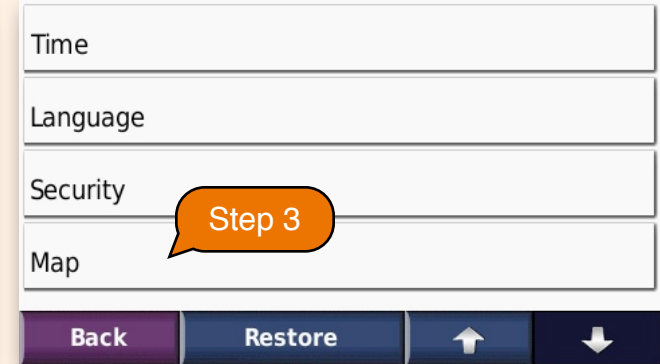

3. Scroll down if necessary, and tap Map.




4. Tap Map Info.



5. Uncheck the built-in road map, and check the Red Pine Mapping Map(s) you want to use.

6. Tap the Back button.

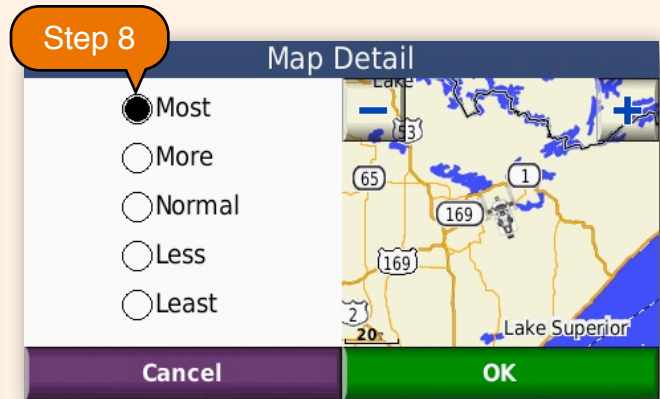

7. Tap the Map Detail button.

8. Set to Most.

9. Tap OK and then tap Back until you're back to the beginning, then tap View Map.

*Note: Menu screen appearance will vary some from model to model, but all will be similar to this.*

## Setting Up A Garmin Oregon 450 (Oregon, Colorado, Montana, Dakota series will be similar)




[Click here for a video version of this guide.](#)




1. Tap **Setup**.




2. Tap **Map**.

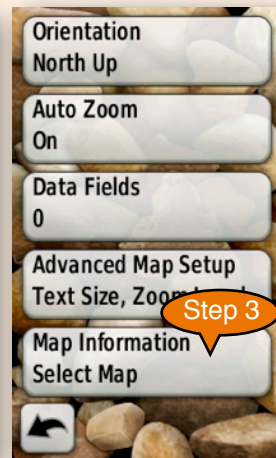

3. Tap **Map Information**.

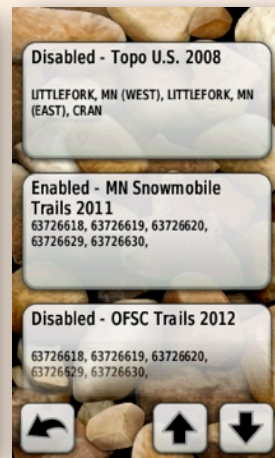

4. Tap an installed map to enable or disable it. Disable all but the Red Pine Mapping map(s).

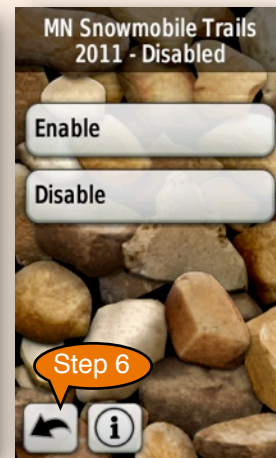

5. Tap **Enable** or **Disable** to turn maps on or off.  
6. Tap **Back** and Repeat for all maps.



7. Tap **Back** until you see screen from step 3.  
8. Tap **Detail**.



7. Set to **Most**.  
8. Tap **Back** until you see screen from step 1.  
9. Click **Map** to view map.


## Setting Up an eTrex Series GPS (60, 76, Rino, etc.)




[Click here for a video version of this guide.](#)




1. Press **Page Button\*** until you're on the map page.  
2. Press **Menu Button\***.  
3. Select\*\* Setup Map.

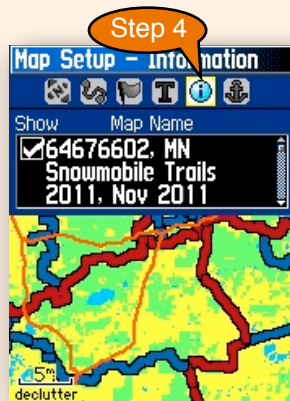


4. Move to the **Information** tab.  
5. Press **Menu Button**.

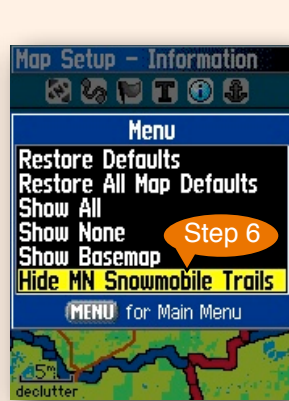

6. Hide all but Red Pine Mapping maps.  
7. Push **Page Button**.

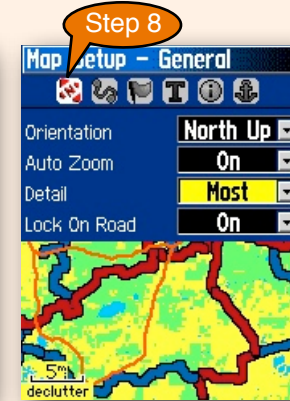

8. Move to the **General** tab.

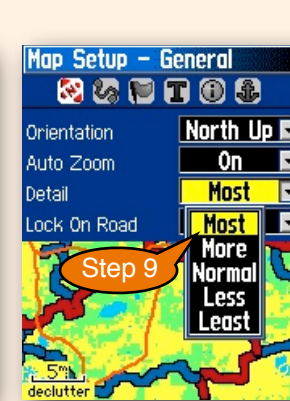

9. Set **Detail** to **Most**.  
10. Press Page Button to return to viewing the map.

\* The location of the menu and page buttons (physical buttons - not on-screen buttons) will vary from unit to unit. On the older eTrex series, the menu button is the lowest button on the left side of the unit, and the page button is the top button on the right.


\*\* Different units have different menu navigation controls. The eTrex series has a clickable joystick. The 60 series has a directional pad and an enter button.

Note: Menu screen appearance will vary some from model to model, but all will be similar to this. Refer to your GPS owners manual for more information.


## Routing On A Garmin Nuvi or Zumo

 [Click here for a video version of this guide.](#)


Follow these instructions to create routes on your Nuvi or Zumo.

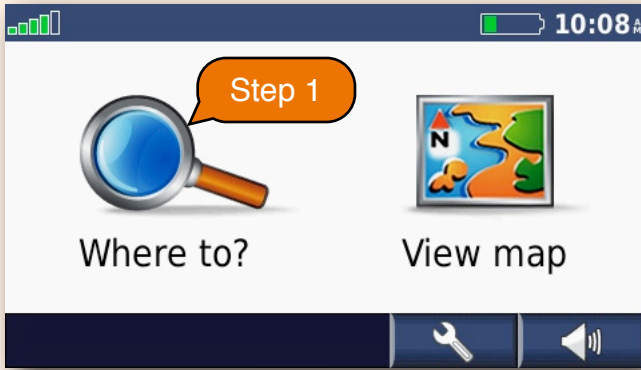

1. Tap **Where to?**

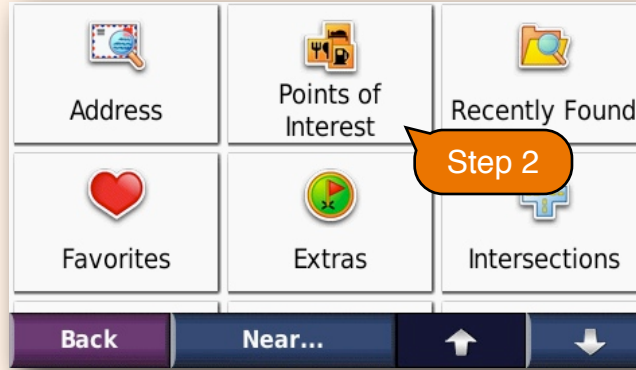


2. Choose what you want to route to. We'll do **Points of Interest** for this example.

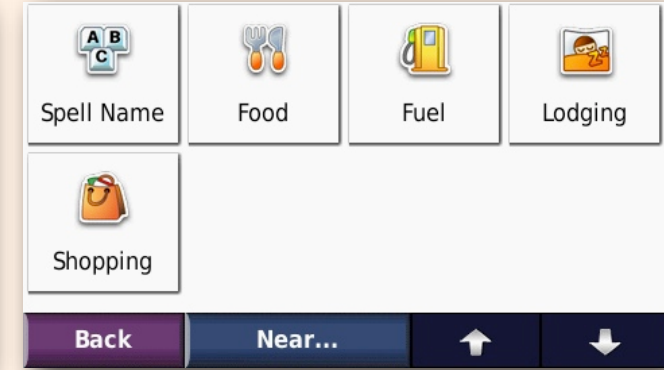


3. Choose the type of POI.



4. Tap your desired destination.

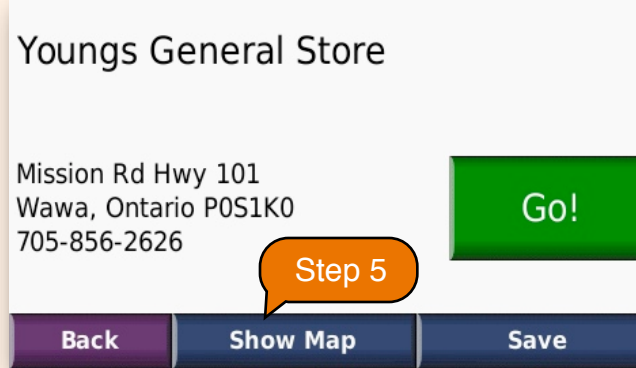

5. Do not tap Go. Instead, tap **Show Map**.

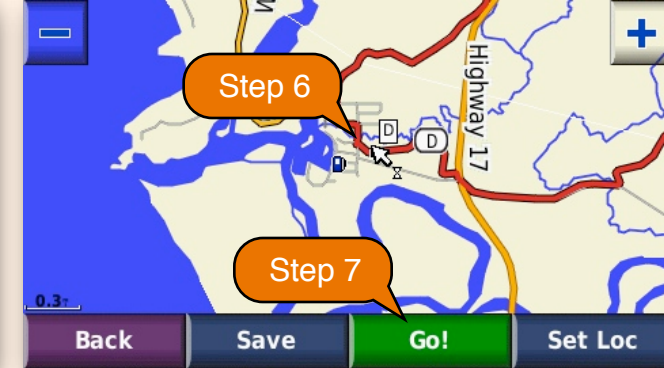


6. Tap on a trail near your desired destination.  
7. Tap **Go!**

*Note: Menu screen appearance will vary some from model to model, but all will be similar to this.*

For routing to work, you need to be very near a trail. If the GPS draws a straight line between your routing points, it's due to one or more of them being too far from a trail. Only the trails are routable, so you will not be routed on any roads. Not all available Points of Interest (POI) will be easily accessible, so it's up to the user to determine if a POI is suitable for snowmobile travel. Leave the GPS set to either "Fastest Route" or "Shortest Route" and not "Off-Road."


## Routing On A Garmin Oregon 450 (Oregon, Colorado, Montana, Dakota series will be similar)

 [Click here for a video version of this guide.](#)



1. Tap **Where To?**
2. Choose what you want to route to. For this example, we'll route to a **POI**. Scroll if necessary.
3. Tap your desired location.
4. Don't tap **Go**. Instead, tap on a spot on a trail near your desired destination.
5. Zoom in and tap on the trail spot you want to route to.
6. Tap the name of the trail at the top.
7. Tap **Go**.
8. Inspect the resulting route and make sure it's where you want to go and it makes sense.

## Routing On An eTrex Series GPS (60, 76, Rino, etc.)

 [Click here for a video version of this guide.](#)



1. From the Main Menu, click **Find**.
2. Choose the type of destination you wish to route to.
3. Choose the POI you wish to route to.
4. Don't click **Go To**, but instead click **Map** to view it.
5. Click on a spot on a trail close to your desired destination.
6. Click **Go To**. Inspect the created route and make sure it's where you want to go and makes sense.

For routing to work, you need to be very near a trail. If the GPS draws a straight line between your routing points, it's due to one or more of them being too far from a trail. Only the trails are routable, so you will not be routed on any roads. Not all available Points of Interest (POI) will be easily accessible, so it's up to the user to determine if a POI is suitable for snowmobile travel. Leave the GPS set to either "Fastest Route" or "Shortest Route" and not "Off-Road."

*Note: Menu screen appearance will vary some from model to model, but all will be similar to this. Refer to your GPS owners manual for more information.*